


CRYSTORAMA LIGHTING



ASSEMBLY INSTRUCTION MODEL #BRI-3007-SA

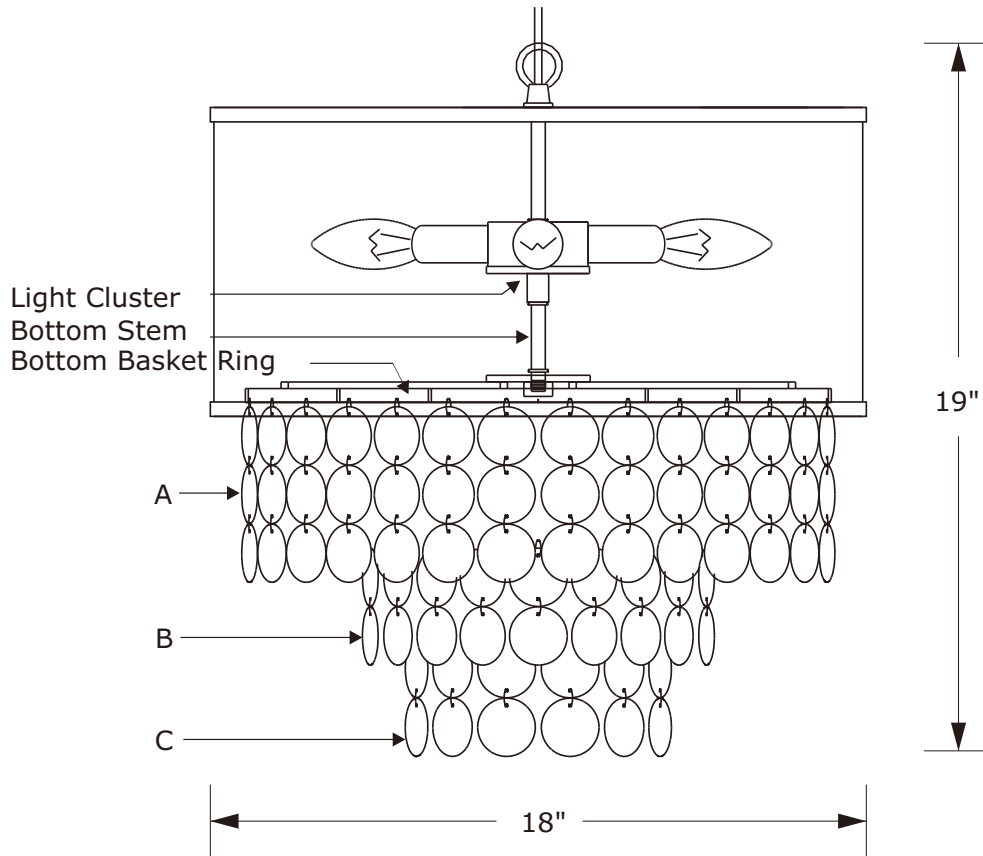

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 4 -Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
THIS FIXTURE IS DAMP RATED

How to Install

- 1.Do a complete inventory of all parts and components before you start installation.
- 2.Insert recommended bulb (not included).
- 3.Screw the bottom stem onto the light cluster.
- 4.Place the basket ring over the bottom stem and secure it with the finial.
- 5.Attach the bottom band ring onto the fabric shade.
- 6.Dress the capiz shell "A" "B" and "C"onto the bottom basket ring as illustrated.

Capiz Shell Sets

A.29 Sets.
(3)40mm


B.20 Sets.
(5)40mm

C.11 Sets.
(7)40mm

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov.

PART NUMBER MODEL #BRI-3007-SA

Part Number

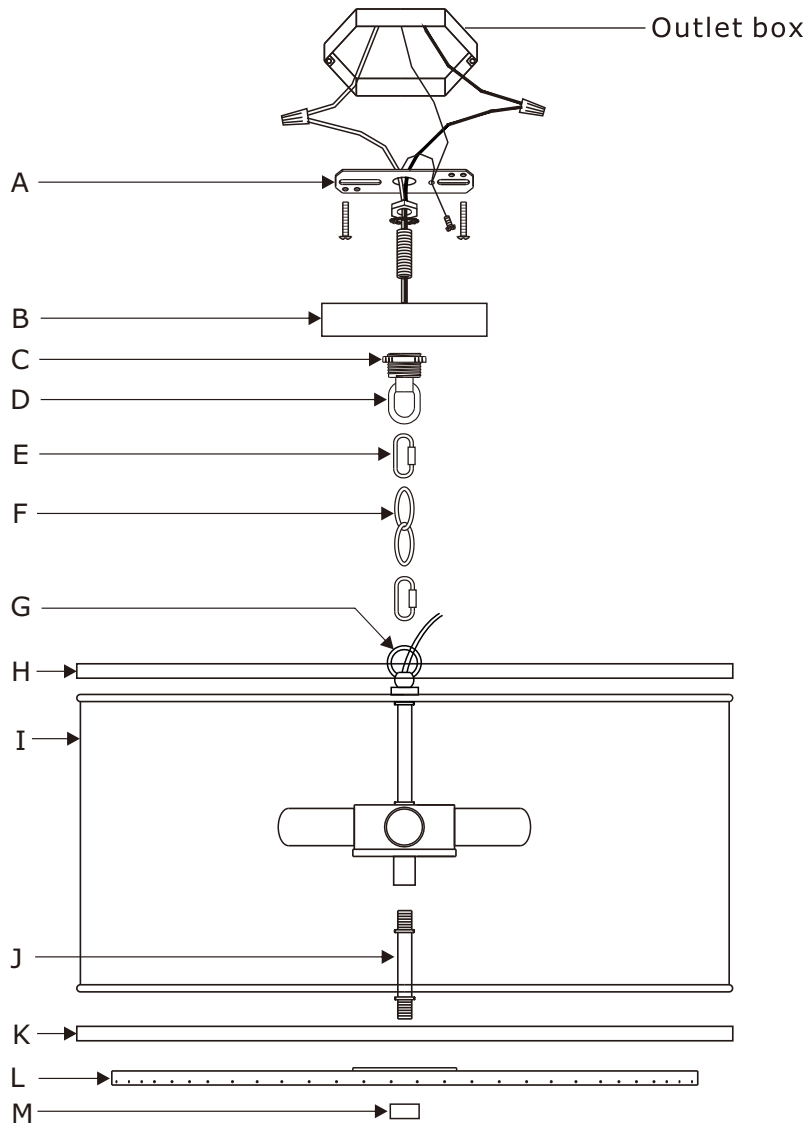

- A. (1) - Mounting Hardware
- B. (1) - Canopy(W4.5", H1") #XRE3000SACAN4.5IN
- C. (1) - Collar Ring
- D. (1) - Collar Loop
- E. (2) - Quick Link
- F. (1) - Hanging Chain(72",4.0mm) #XRE3006SACHA4MM
- G. (1) - Fixture Loop
- H. (1) - Top Band Ring
- I. (1) - Fabric Shade(W18",H8.5") #XRE3007SASHA18IN
- J. (1) - Bottom Stem(2.95",9.3mm)
- K. (1) - Bottom Band Ring
- L. (1) - Bottom Basket Ring
- M. (1) - Finial #XRE3007SAFIN